


Temporary Blade Mount

Your blades have been mounted temporarily with very few screws on purpose. This enables your coach to check that the blades are properly aligned. Make sure you do not skate very long on this number of screws. A couple of sessions should enable your coach to determine if they are correctly aligned. Then you will either need to bring them in for the other screws to be put in or you can put the screws in yourself. It is better to have the holes pre-drilled if possible with a 3/32 drill bit and only about half the length of the screw. The short screws are for the front and the longer ones are for the heels. Placement should be as follows.

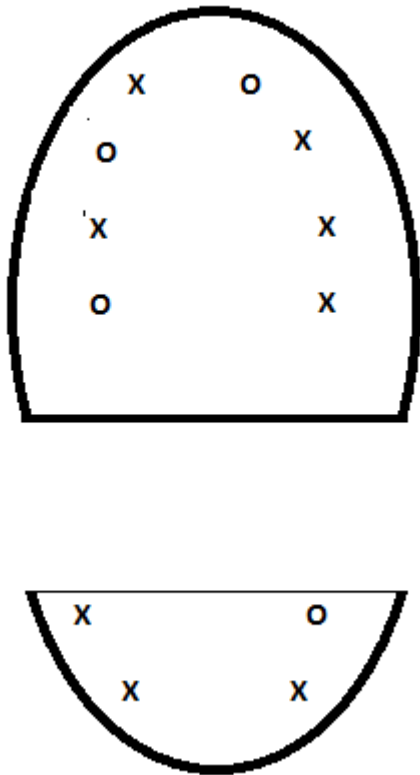

Insert screws where the X's are and leave the remaining holes open. Simply reverse this pattern for the other foot. If you have any questions call me at 902-462-7191.

Denyse Neville